1486 Drum Roller Watch Instruction Manual



Features

- Rollers Display Hours, Minutes
- Temporarily Stop Timing Function

Operating Steps

A. Operating instructions:

Before operating any steps, Roller Positioning-Adjust time position at <12:00>

- Press D key and hold for 2 seconds, the rollers will start rolling and stop at random position.
- Press C key to adjust to 12 o'clock position.
- Press B key to adjust the second digit Minutes to zero(0) position.
- Press A key to adjust the first digital Minutes to zero(0) position.
- (you can hold the button to speed up the motion)
- After adjusted to 12:00 position, press D key or wait for 15 seconds, the rollers will be stopped at random position, complete positioning.

B. Present Time Setting:

- Press C key and hold for 2 seconds, the hour digit will move for signal.
- > Press C key to adjust the present Hour time.
- Press B key to adjust the second digit Minutes time.
- Press A key to adjust the first digital Minutes time.
- (you can hold the button to speed up the motion)
- After adjusted, press D key or wait 15 seconds, to confirm the present time correct.

C. Demo Animation Mode:

- Press A key, the roller will scroll 2 round to demo the drum moving.
- > Once finished rolling, it will back to normal time.

D. Temporarily Stop Timing Mode:

- Press B key three times in shortly, the roller stops at 12:00 until any press.
- Once press any key, the watch will back to normal present timing.

Attention:

*When the 4 keys are pressed accidentally without prescribed orders, time can be altered. If that happens, please reset the "Time".

